


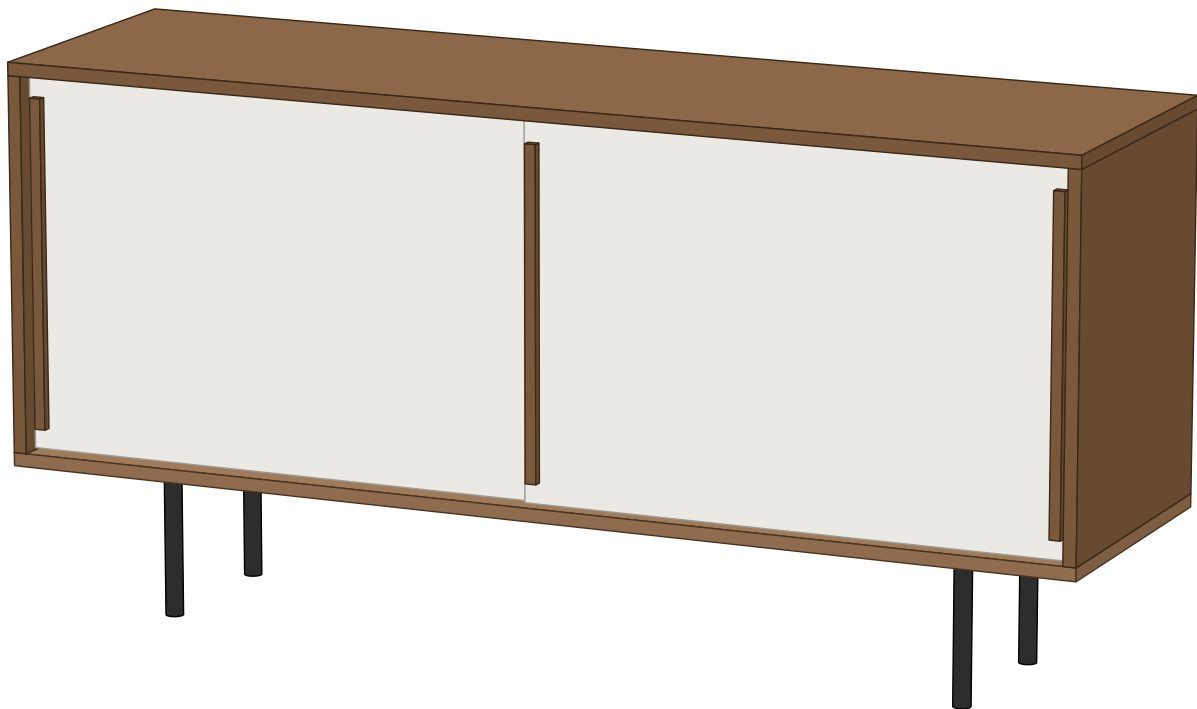

KURT THUT · 1953

Sideboard S943

W 160 × D 45 × H 80 cm






Walnut

Lacquered Pavatex sliding doors

Powder-coated steel tube legs

PREPARATION

What's in the package.

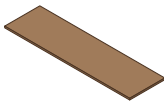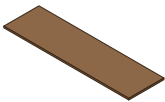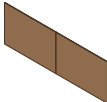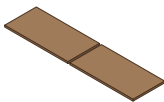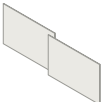1 ×  A Base	1 ×  B Top	2 ×  C Back panel two pieces
2 ×  D Shelf one per compartment	2 ×  E F Sliding door Pavatex, reversible	2 ×  S Side panel left and right identical
1 ×  M Centre divider	4 ×  Leg steel tube with mounting plate	3 ×  Handle strip solid walnut

HARDWARE

12 ×  Connector sides + centre divider	8 ×  Shelf support brass-plated spoon support · 4 per shelf	16 ×  Countersunk screw 4 per leg	9 ×  Wood screw 3 per handle strip	1 ×  T-handle Allen key for connectors + legs
---	--	--	---	--

TOOLS

T-handle Allen key (included) and a Phillips screwdriver for the handle strips.


TWO PEOPLE

From step 3 on it is much easier and safer with two people.

OVERVIEW

How it all fits together.

The letters are also marked on the parts. Lay everything out on the blanket first, sorted.

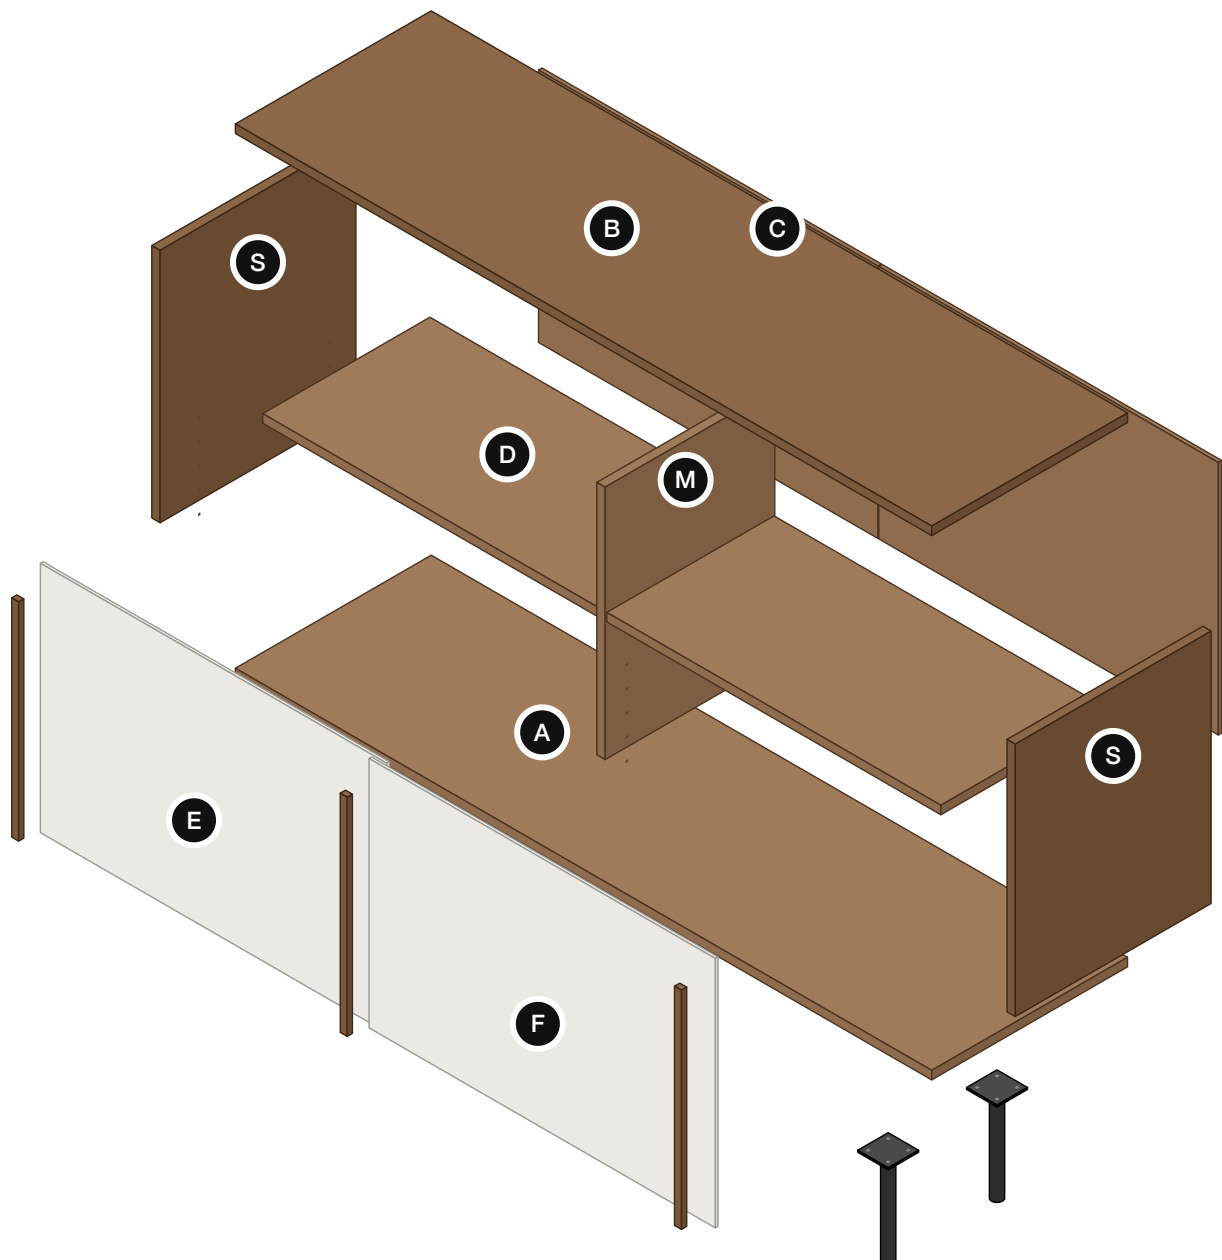

01

Work on something soft.

Use a blanket or the flattened box.
Never directly on tiles or concrete.

02

Position first, then tighten.

Seat each part cleanly first, then
tighten with the Allen key.

03

Never force it.


If something jams, a part is
crooked. Lift it off and try again.

1

CONNECTORS

Clip in the connectors.

Press a connector into each slot along the edges of **S** and **M** – 4 per part, 12 in total. They click into place.

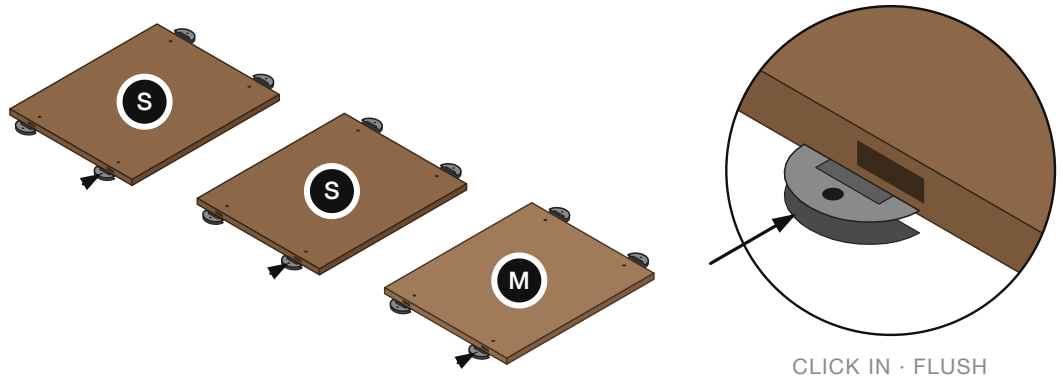

✓ CORRECT

The connector sits flush in the slot, the small hole faces inwards.

ⓘ SMALL HOLE


The Allen key goes through this hole later.

2

LEGS

Screw on the legs.

Lay base A on the blanket with the **underside facing up**. Place each leg with its mounting plate over the pre-drilled holes and fix it with 4 **countersunk screws** – 16 in total.

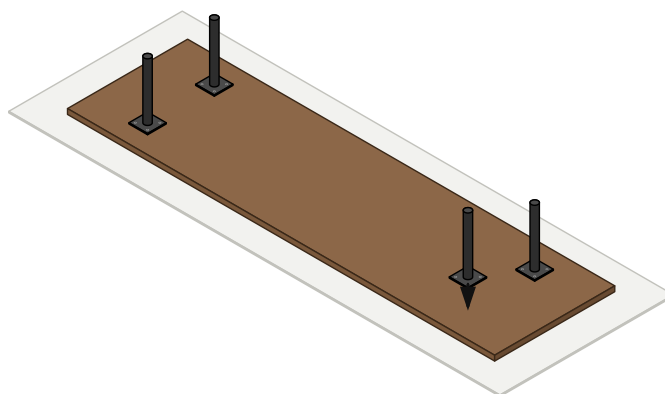

✓ CORRECT

Mounting plates lie flat, all screw heads flush.

⊗ CAUTION


Don't overtighten – the threads are in the wood.

3

SIDES

Fit the sides.

Turn the base over and stand it on its legs. Place side panels **S** on the ends – the connectors engage in the slots of the base. Insert the Allen key into the small hole and **turn clockwise** until the joint is closed.

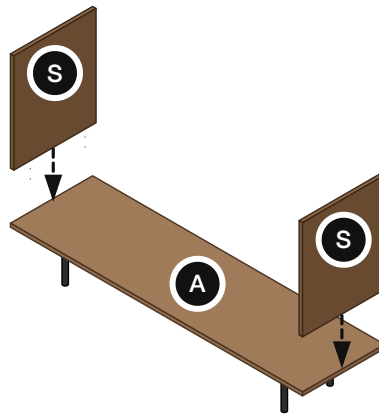

✓ CORRECT

The groove for the back panel faces inwards and to the back.

! TWO PEOPLE


One person holds the side upright, the other tightens.

4

BACK

Slide in the back panel.

Slide both back panel pieces **C** down into the grooves of the side panels from above until they rest on the base.

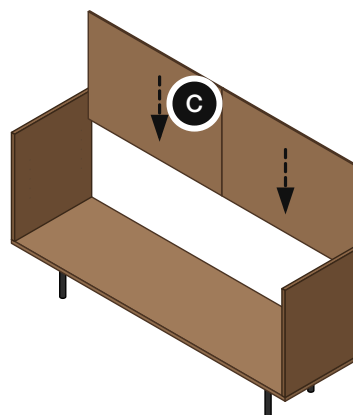

✓ CORRECT

The two pieces meet in the middle – where the centre divider will go.

✗ DON'T HAMMER


If the back panel jams, wiggle it gently instead of hitting it.

5

DIVIDER

Fit the centre divider.

Stand centre divider **M** on the mark in the middle of the base, against the back panel. Tighten the lower connectors with the Allen key.

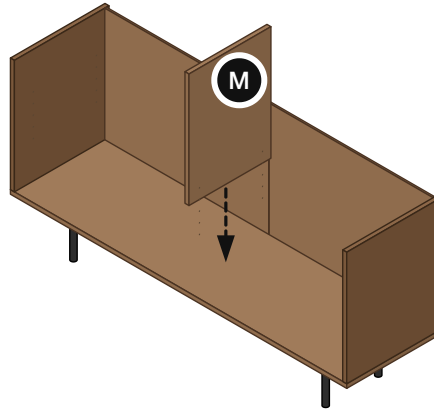


6

TOP

Fit the top.

Lay top **B** on with two people – the connectors of the sides and divider engage in its slots. Tighten all upper connectors from inside with the Allen key.

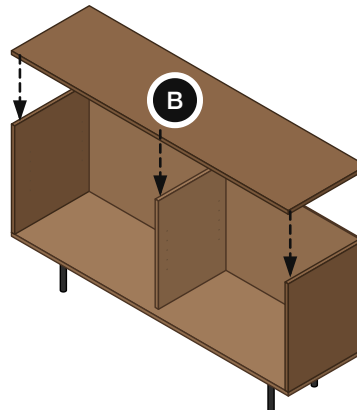

✓ TEST

The carcass stands straight, all joints are closed, nothing wobbles.

✗ DON'T DRAG



From now on lift the carcass – never drag it across the floor.

7

SHELVES

Insert the shelves.

In each compartment, push 4 **shelf supports** into the rows of holes – front and back at the same height. Slide shelf **D** in from the front and lay it on the supports.

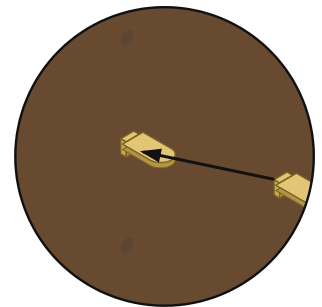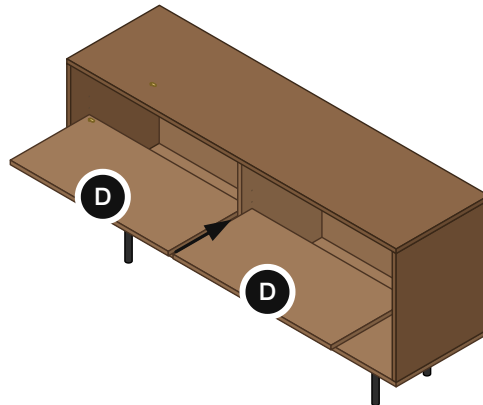


INSERT SUPPORTS

8

HANDLES


Screw on the handles.

3 handle strips, 3 screws each: door E on the left edge, door F on both edges. When closed there is a handle on the left, in the middle and on the right.

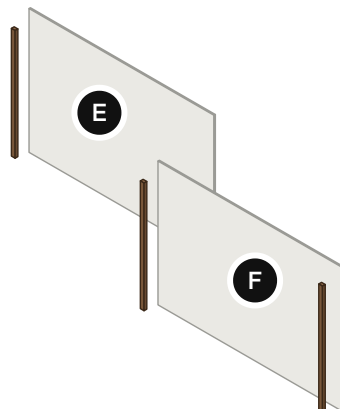

FIRST: WHICH SIDE?

The Pavatex doors are **reversible**: one side smooth, one side textured. Decide which faces outwards – and screw the handles onto that side.



SMOOTH



TEXTURED

✓ CORRECT

Handle strips run the full door height, straight and flush with the edge.

❌ BOTH THE SAME


Both doors with the same side facing out.

9


DOORS

Hang the doors.


First door E into the rear track, then door F into the front track. Each door in three moves:

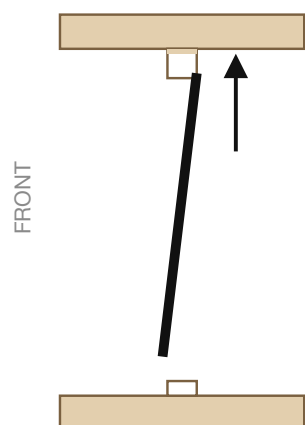


1 · TILT THE TOP INTO THE DEEP GROOVE

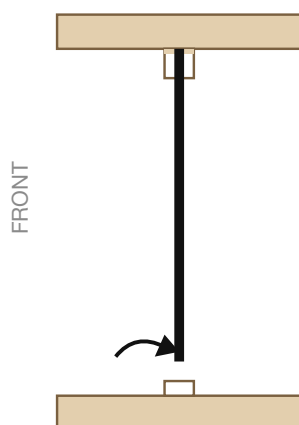

2 · SWING THE BOTTOM IN

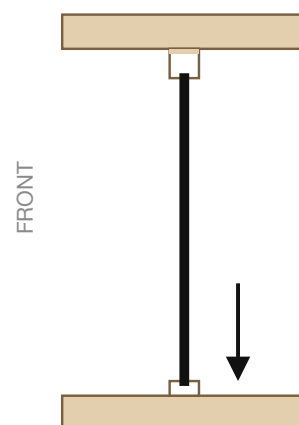

3 · LOWER INTO THE BOTTOM GROOVE

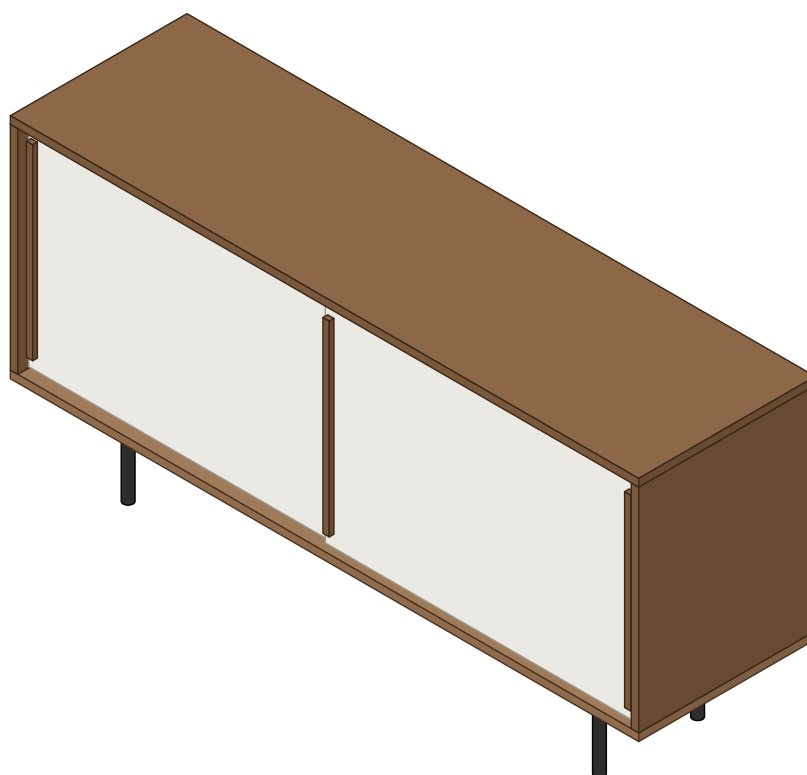

✓ TEST


Both doors slide easily across the full width and close flush.

✗ STIFF?

Take the door out again and check it is in the right track.

DONE

Enjoy it.

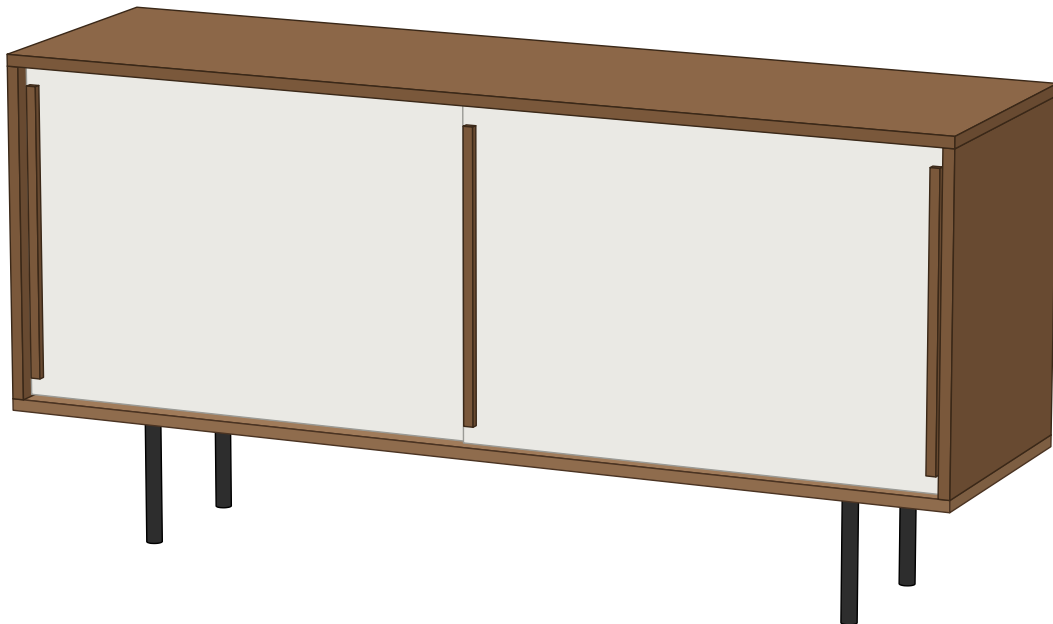

SHELVES

The shelves can be moved at any time: put the supports into another row of holes and lay the shelf back on.

CARE

- Wipe the walnut with a slightly damp cloth, then dry it.
- Clean Pavatex doors only dry or with a barely damp cloth.
- No abrasive cleaners, no furniture polish containing silicone.
- Re-tighten the connectors and leg screws briefly after a few weeks.

QUESTIONS? SOMETHING MISSING?

Write to us.
We're happy to help.

SwissFurniture

mail@swissfurniture.ch

www.swissfurniture.org

Showroom: Edition Populaire
Viaduktstrasse 81, 8005 Zurich

SALES & DISTRIBUTION H100 · Bogen33 · Memorie.ch · Viadukt*3 — Hohlstrasse 100, 8004 Zurich · www.h100.ch